

Max-Bilt Trail Tail Roxor Installation Guide

On the Rox Fabrication

Ontheroxfab.com

406-967-2189



***READ INSTRUCTIONS THOROUGHLY BEFORE BEGINNING. OTR IS NOT RESPONSIBLE FOR INCORRECT INSTALLATION OR LOCAL LAWS REGARDING AFTERMARKET ACCESSORIES. THE USER IS RESPONSIBLE FOR ALL LIABILITIES ASSOCIATED WITH THE INSTALLATION AND USE OF THIS PRODUCT.**

ALWAYS UTILIZE PERSONAL SAFETY EQUIPMENT WHEN YOU ARE WORKING IN THE SHOP.

DISCONNECT BATTERY BEFORE YOU BEGIN.




- Begin installation by making sure the battery is disconnected.
- Remove the factory tail lights. Be careful when disconnecting the connector as this will be reused.
- Cut the factory plug off of the factory light. Leave yourself approx 4" of wire on connector as shown below.




Refer to the following wire description.

Roxor Harness Wire Color	Use	Max-Bilt Tail Light Wire Color
Black/White	Ground	Black
Grey	Reverse	White
Brown	Stop/Turn	Yellow
Green/White	Taillight	Red

- Any unused wires on the factory harness can either be capped off or removed from the plug.
- Strip Approx ¼" of insulation off the ends of the wires on both harnesses.

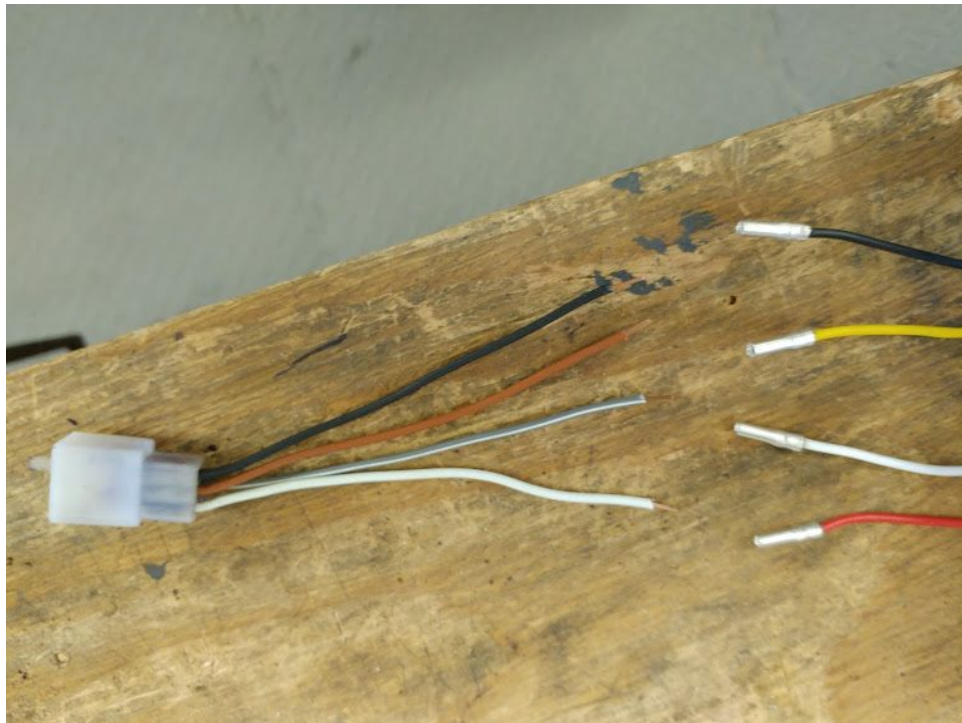

- Slide heat shrink onto one end of the wires.
- Using butt connectors crimp and connect wires together.
- Solder connections, and slide heat shrink over connections. Shrink connections. Refer to the picture below.

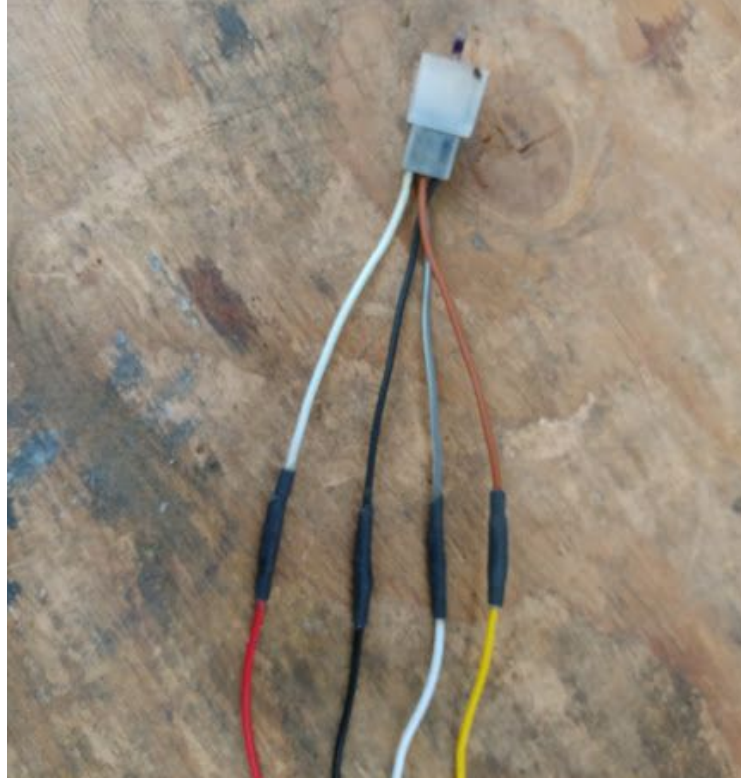

- Wrap wires back up with wire loom or electrical tape.
- Mount and install tail lights onto the OTR Rear Quarter Panel Armor in the precut holes.

