

# Fuel Tank Skid Installation Guide

On the Rox Fabrication


[Ontheroxfab.com](http://Ontheroxfab.com)

406-967-2189



\*READ INSTRUCTIONS THOROUGHLY BEFORE BEGINNING. OTR IS NOT RESPONSIBLE FOR INCORRECT INSTALLATION OR LOCAL LAWS REGARDING AFTERMARKET ACCESSORIES. THE USER IS RESPONSIBLE FOR ALL LIABILITIES ASSOCIATED WITH THE INSTALLATION AND USE OF THIS PRODUCT. ALWAYS UTILIZE PERSONAL SAFETY EQUIPMENT WHEN YOU ARE WORKING IN THE SHOP.

- Begin with loosening the four bolts on the fuel tank. DO NOT TAKE THEM OUT!

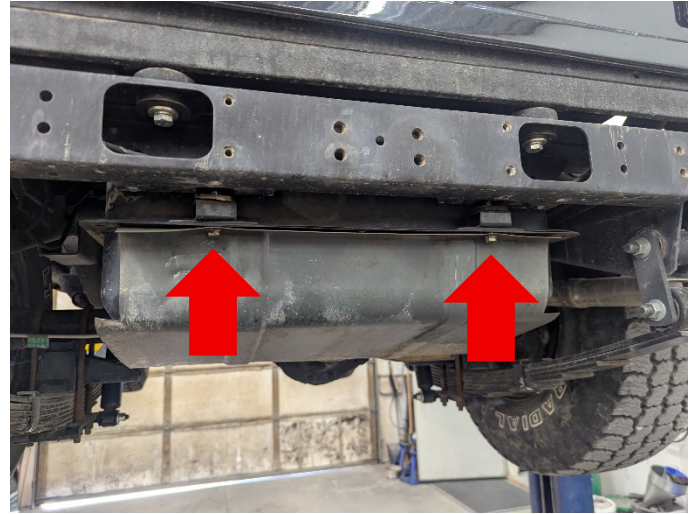

- Now with the tank loose use a yard stick to slide a motorcycle strap between the tank and rock guard.



- Use the strap to secure the tank to the frame and tighten to hold tank in position.



- Once tank is secured remove the 4 bolts and the stock rock guard. Next take the OTR skid plate, hold into position and start the bolts. Do not tighten.



- Pull the strap out and tighten all the bolts.

