Rear Tube Fenders

On the Rox Fabrication

Ontheroxfab.com

406-967-2189

***READ INSTRUCTIONS THOUROUGHLY BEFORE BEGINNING. OTR IS NOT RESPONSIBLE FOR INCORRECT INSTALLATION OR LOCAL LAWS REGARDING AFTERMARKET ACCESORIES. THE USER IS RESPONSIBLE FOR ALL LIABILITIES ASSOCIATED WITH THE INTSALLATION AND USE OF THIS PRODUCT.**

ALWAYS UTILIZE PERSONAL SAFETY EQUIPMENT WHEN YOU ARE WORKING IN THE SHOP.

DISCONNECT BATTERY BEFORE YOU BEGIN.

- Mark the cut line around the rear fender flare

- Mark 4 5/8” down from top of fender

- Cut marked area CAREFULLY! Cutting to far may damage the body (red area)

- When cutting the top line there is a second layer, DON'T CUT THROUGH SECOND LAYER!

- Fit quarter panel up to fender and trim areas to fit

- Take quarter panel down and align tube up with a 1 ½” space between tube and quarter panel

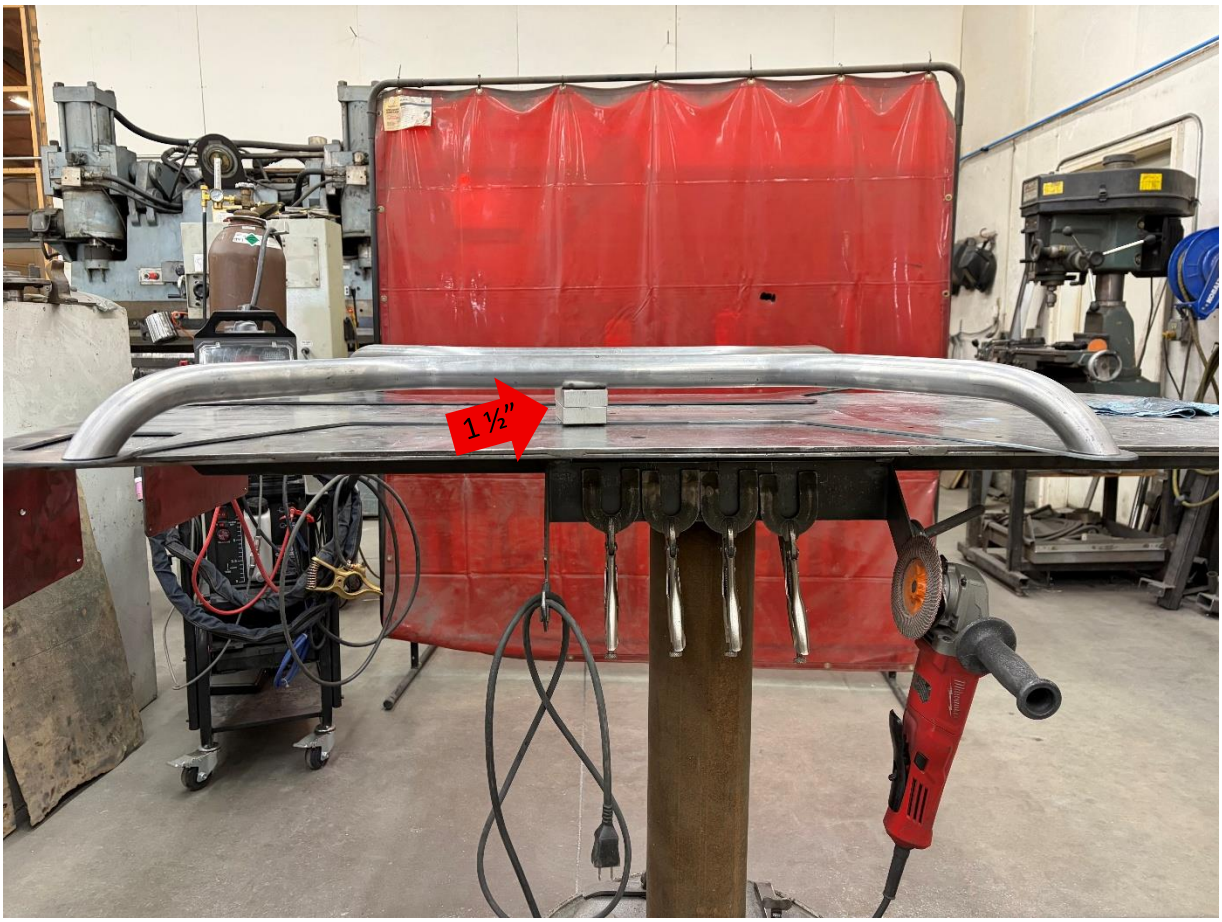

- Weld tubes on

- Start on one end and tack and form the strip around the tube

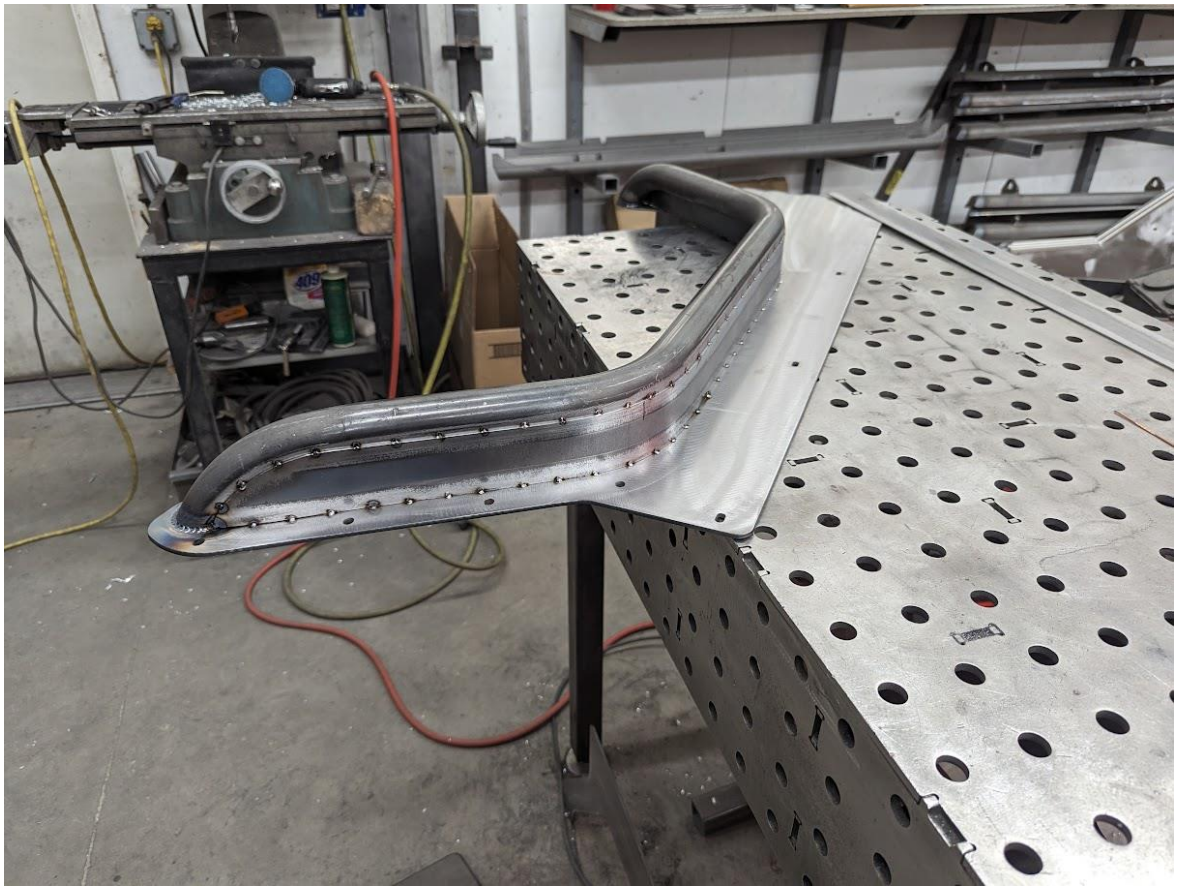

- Once you have it fully tacked and formed, finish weld it as you like, tube fender as shown has been tig welded